


**YOUR CD PLAYER
OR AMPLIFIER**

YOUR SC-1201 OR MC-2401


**YOUR AMPLIFIER
OR SPEAKERS**

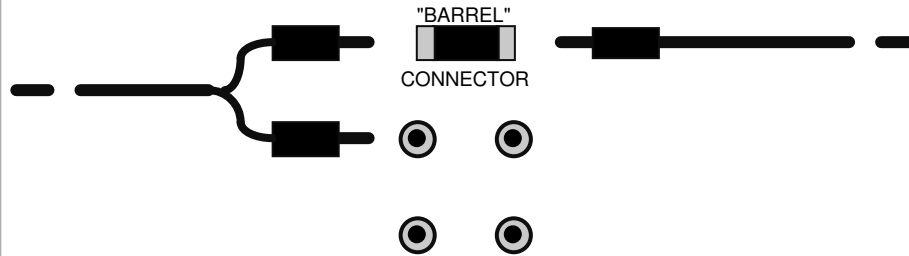


ABOVE IS A SIMPLE MONOPHONIC HOOKUP. YOU CAN USE A "Y" CONNECTOR TO SEND SIGNALS TO BOTH CHANNELS OF A STEREO AMPLIFIER. (OR USE THIS IF YOUR CD HAS "DELAY" BETWEEN THE LIGHTNING FLASH AND THE THUNDER SOUND.)




**THESE CONNECTORS
MUST FIT YOUR CD
PLAYER OR AMPLIFIER!**

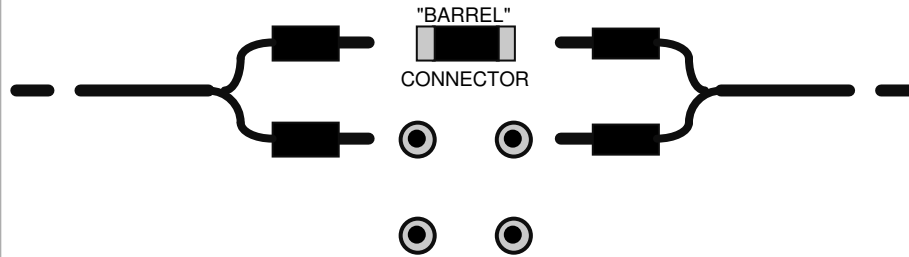

**THESE CONNECTORS
MUST FIT YOUR
AMPLIFIER OR SPEAKERS!**

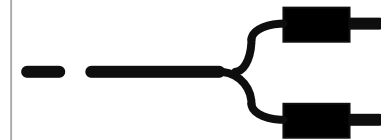

ABOVE IS A SIMPLE MONO OR STEREO HOOKUP. BELOW IS A SIMPLE STEREO HOOKUP, BUT THE SIGNAL LEAVING THE SC-1200 OR MC-2400 WILL NOT BE STEREO. THE LEFT AND RIGHT CHANNELS WILL BE MIXED TOGETHER AND SOUND THE SAME.

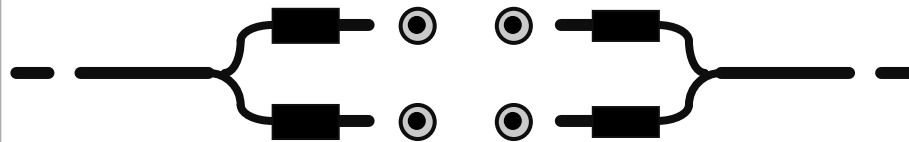

THESE ARE "PHONO" (SOMETIMES CALLED "RCA") CONNECTORS